



Camperbox Kit Installation Manual

$\bullet \bullet \bullet \bullet \bullet \bullet \bullet \bullet$

 $\bullet \bullet \bullet \bullet \bullet \bullet \bullet \bullet$



INTRODUCTION

Welcome to the Camperbox Kit Installation Manual! We are thrilled that you have chosen our product to enhance your outdoor adventures. This manual is designed to guide you through the installation process step by step, ensuring that you can enjoy your camper box to its fullest potential.

Before you begin, please ensure that you have all

the necessary tools and equipment on hand. Please be advised that the "Kata Camperbox" unit you've purchased is a standard model designed to accommodate various vehicles. However, given the variations in vehicle specifications and configurations, minor adjustments such as trimming the legs of the bed may be necessary during the installation process to ensure an optimal fit.

If you encounter any difficulties during the installation process, do not hesitate to reach out to our customer support team for assistance. *Now, let's get started!*





 $\bullet \bullet \bullet \bullet \bullet \bullet \bullet \bullet$


Installation Steps:

Step 1: *Placement of the Box*


O1. Unpack the Camperbox Kit from the pallet carefully, ensuring that all components are intact.
O2. Position the box in the desired location within your vehicle, ensuring that it fits securely and does not obstruct any existing features.

03. Refer to the provided images to ensure correct positioning:



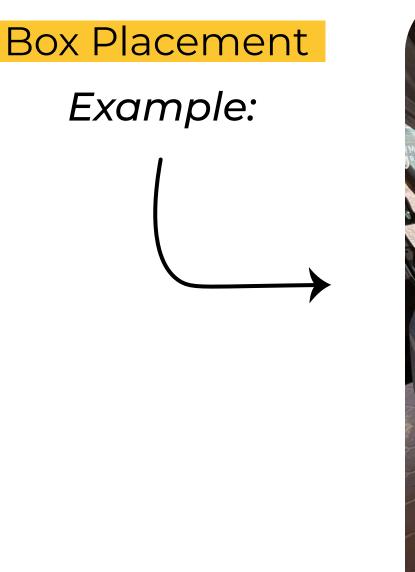









Installation Steps:

Step 2: Leveling the Box (If Required)

If the floor of your vehicle is not level, follow these additional steps:

01.

Add packers under the front edge of the box to make it level.





O2. Extend the drawers out by an extra 15 cm. using the provided tabs.




03.

Secure the packers by screwing them in from above.

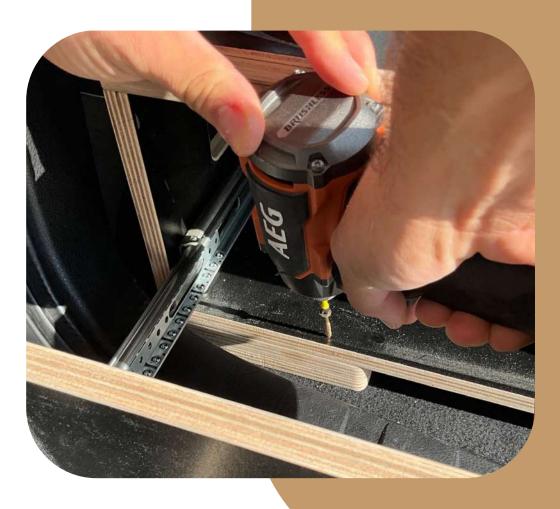



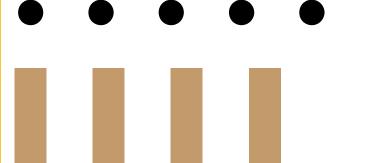



Х

Installation Steps:

Step 3: Anchoring the Box

O1. Locate the anchor points within your vehicle where the box will be secured.







UZ.


Screw the provided metal loops into the side of the box above these anchor points, ensuring they do not obstruct the movement of the bed.



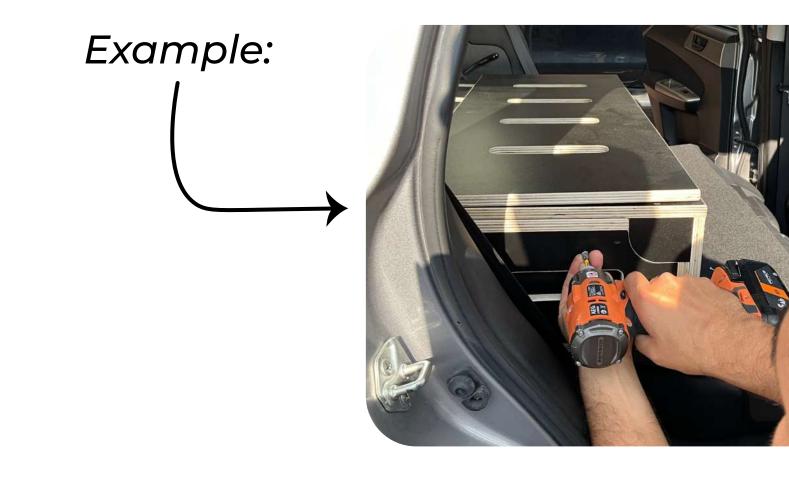

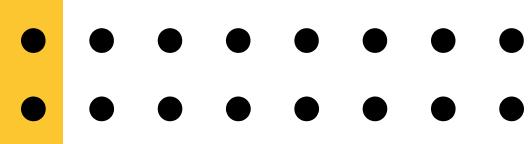





Congratulations!

You have successfully installed your Camperbox Kit.


If you have any questions or need further assistance, please don't hesitate to contact our

customer support team.

it's time to hit the road and enjoy your outdoor adventures to the fullest.

Support team at **0451740833** or **info@katacamperbox.com**



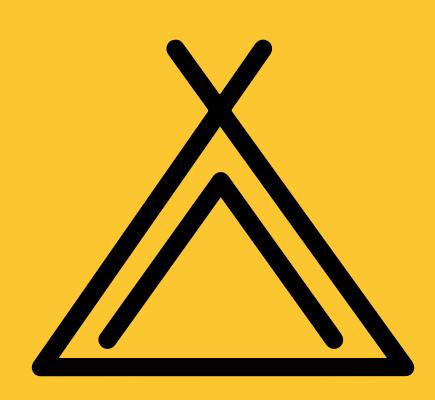

Kata