

**How to
measure
a SUV**

Measurement

Measurement 1:

Measure the width in between the wheel arches.



Measurement 2:

Measure the total length behind the front seats when pushed all the way forward.



Measurement 3:

Measure where the second row of seats end when folded down.


Measure the height of the CamperBox of your choice (200mm or 250mm) and hold that point against the back of the second row of seats in the upright position.



Measurement 4:

Using that point measure towards the closed boot door.



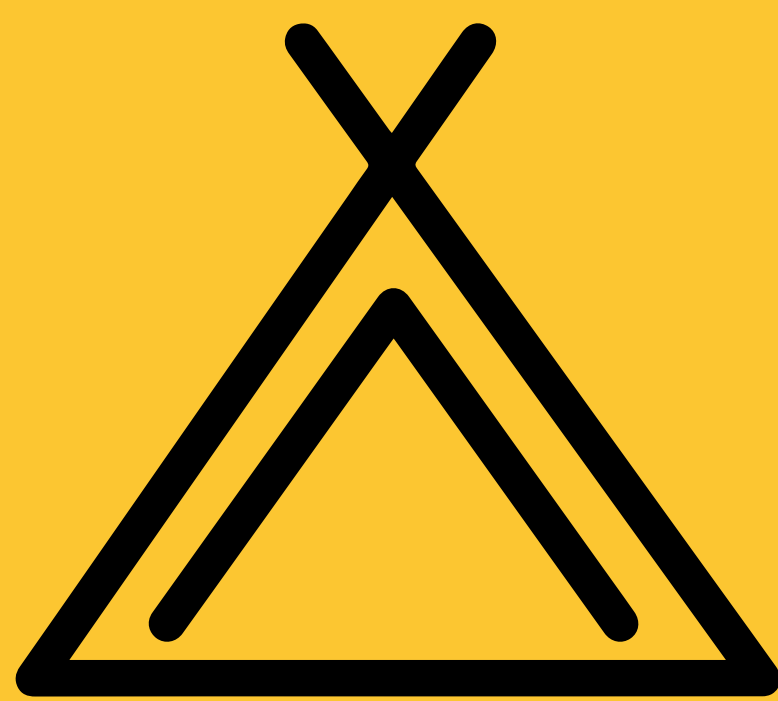

K a t a