



SURFBOX

 Kata

INTRODUCTION

Welcome to the Surfbox Kit Installation Manual!
We are thrilled that you have chosen our product to enhance your outdoor adventures.

This manual is designed to guide you through the installation process step by step, ensuring that you can enjoy your camper box to its fullest potential.


Before you begin, please ensure that you have all the necessary tools and equipment on hand.

Please be advised that the "Kata Camperbox / Kata Surfbox unit you've purchased is a standard model designed to accommodate various vehicles.

However, given the variations in vehicle specifications and configurations, minor adjustments such as trimming the legs of the bed may be necessary during the installation process to ensure an optimal fit.

If you encounter any difficulties during the installation process, do not hesitate to reach out to our customer support team for assistance.

Now, let's get started!

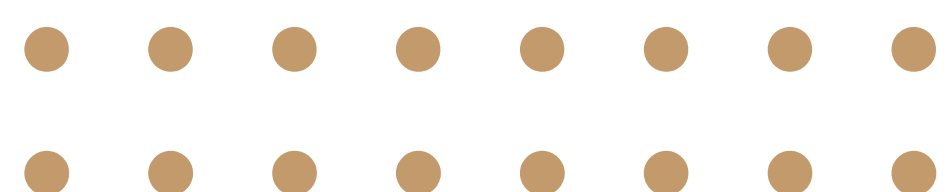

Surfbox

Kit Installation Manual

Installation Steps:

01.

Remove the top of the box.



02.

Place box on the driver side up against the wheel arch.



03.

Push in the wheel arch supports, using the numbers as guides where to place them.



Installation Steps:

04.

Screw the supports in with:
45 mm. black screws
(*Black SurfBox*)
or 40 mm. golden screws
(*White SurfBox*).



05.

Option 1: Screw through
the floor of the box down
into the floor.



06.

Put the top of the box back and screw it down.

07.

Push the front and back
wheel arch overs into place,
using the numbers as
guides where to place them.
(Trimming may be required)



Installation Steps:

08.

Screw them in with 45 mm black screws (Black SurfBox) or 40mm golden screws (White SurfBox).

09.

Option 2: Find the anchor points of your vehicle.

a) Screw in provided metal loops to the side of the box above those points.

b) Use straps between the anchor points and the metal loops to pull the box down.

10.

Place the first cover of the wheel arch, and screw in with 45mm black screws (Black SurfBox) or 40mm golden screws (White SurfBox).
(Trimming maybe required)



11.


Put the rest of lids in their place.
(Trimming may be required)




Installation Steps:

12.

Enjoy your Kata campervan!

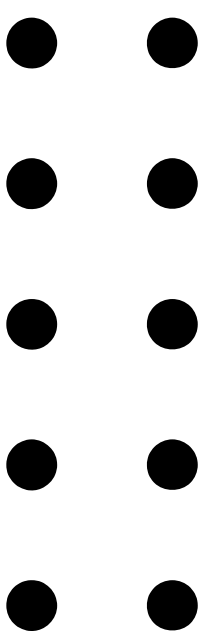

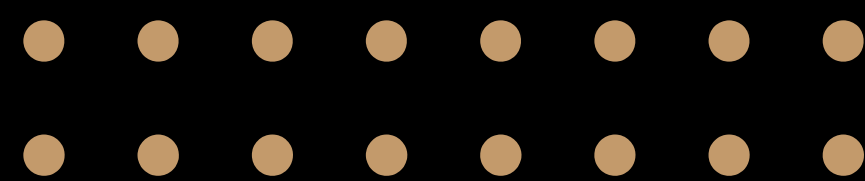

Congratulations!


You have successfully installed your
Surfbox Kit.


If you have any questions or need further
assistance, please don't hesitate to contact our
customer support team.

it's time to hit the road and enjoy your outdoor
adventures to the fullest.



Support team at **0451740833**
or **info@katacamperbox.com**

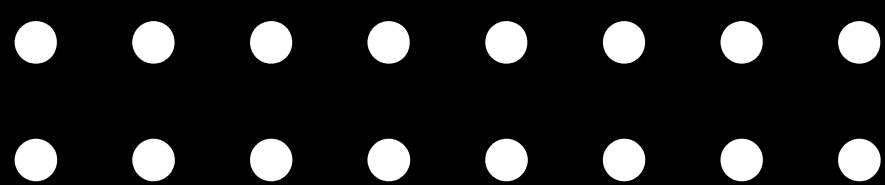

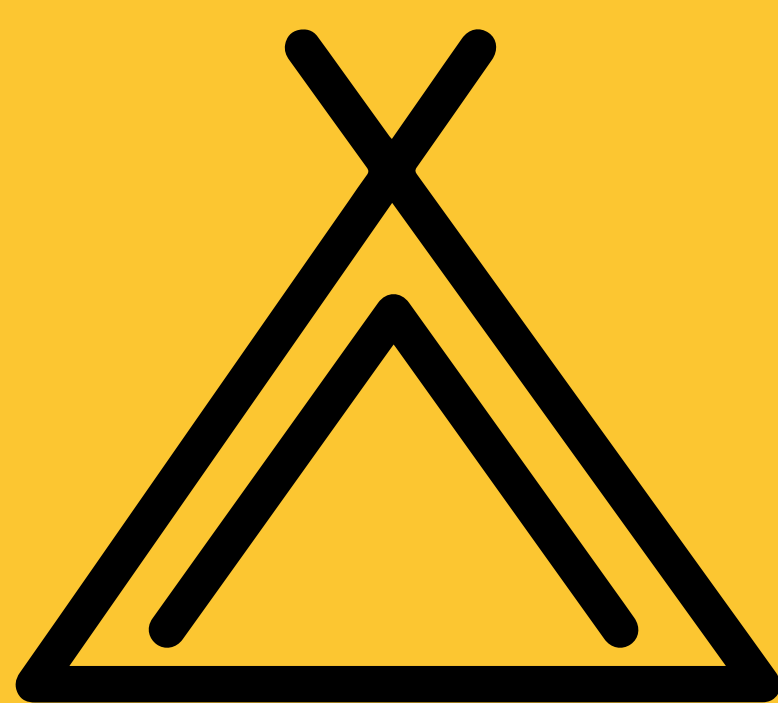

K a t a